



Outdoor Building Products


Garden Box

1x6 Material


SKU: 4812GB

4'x8'x12"

8' Side Panel (A)

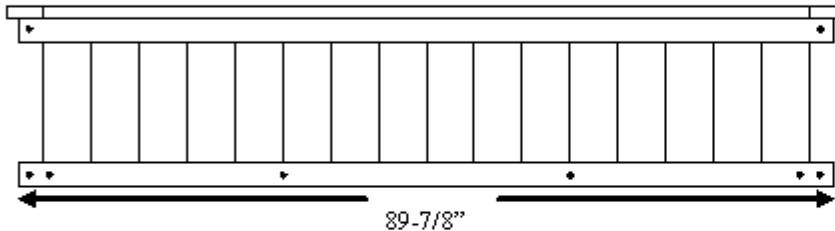

4' End Panel (B)

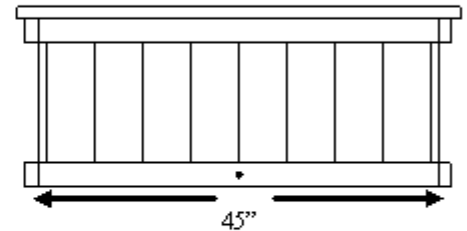

Parts List

- 2 - 89-7/8" Side panels (A)
- 2 - 45" End panels (B)
- 2 - 84-5/8" Top caps (C)
- 2 - 49-1/4" Top caps (D)
- 4 - 2x2x43-1/2" base supports (E)
- 18 - 2-3/4" RSS screws
- 20 - 1-1/2" RSS screws
- 1 - RSS bit (for RSS screws)


Assembly Instructions

1. On a level surface, attach both (A) and (B) panels one corner at a time with supplied RSS screws. **Pay close attention to the top/bottom orientation of the predrilled holes as shown above and make sure that the rough finish of the panel is facing out. Refer to photo in page 2 for a more detailed image.**
2. Attach all 2x2x43-1/2" base supports (E) to bottom as illustrated below. (Using RSS screws provided)
3. Attach both pairs of top caps (C and D) to box through predrilled holes using tan screws provide as shown below. (Position from outside edge to provide a 3/4"-7/8" overhang) **Do not overtighten screws.**
4. (Optional) Lay hardware cloth (not included) in the bottom of box.
5. Position box in yard and enjoy.

84-5/8" Top Cap (C)

Use (1) 2-3/4" RSS screw on each End panel (B) to attach base supports (E) (holes are pre-drilled on B)

2x2x43-1/2" base supports (E) on each end, two in the middle.

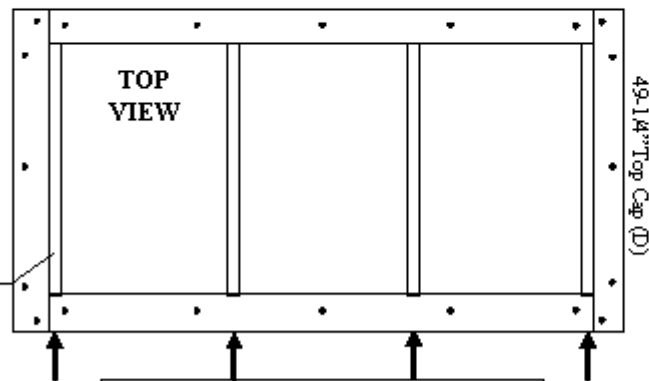

Use (8) 2-3/4" RSS screws on each side panel (as shown on side panel (A) diagram; holes are predrilled) for the base supports (E)

Additional tools needed:

- Drill/driver
- Phillips bit (for Tan screws)
- Measuring tape



2-3/4" RSS screws (18)



1-1/2" RSS screws (20)