




Rustic Garden Box Kit


Sizes: 4x6 and 4x8

PARTS LIST

- 2 - Side panels with corner braces
- 2 - End panels
- 1 - Wire mesh bottom
- 12 - 3" Screws
- 1 - Bit

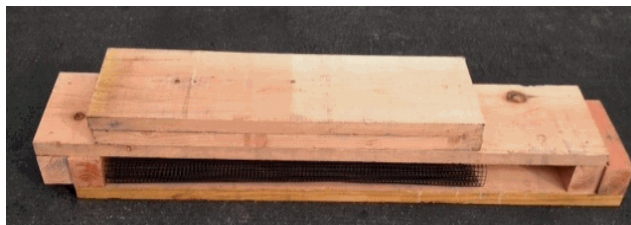

Unassembled garden box kit

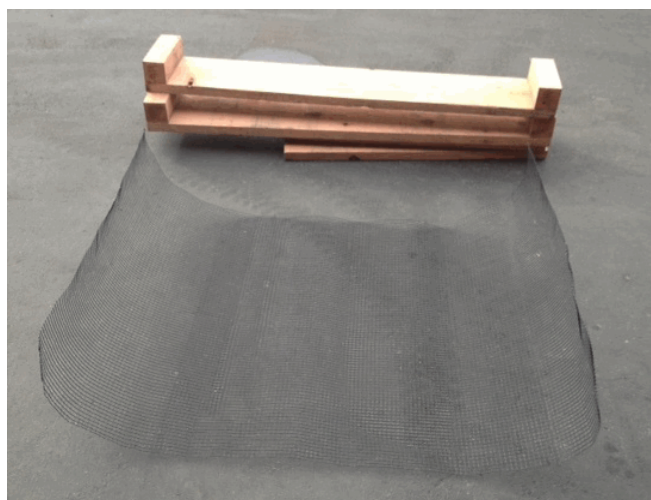


Step 1

Unroll the mesh bottom and lay it flat on the ground in the desired location in your yard.




Step 2

Place the two side panels on top of the wire mesh and line up with the edges of the mesh.

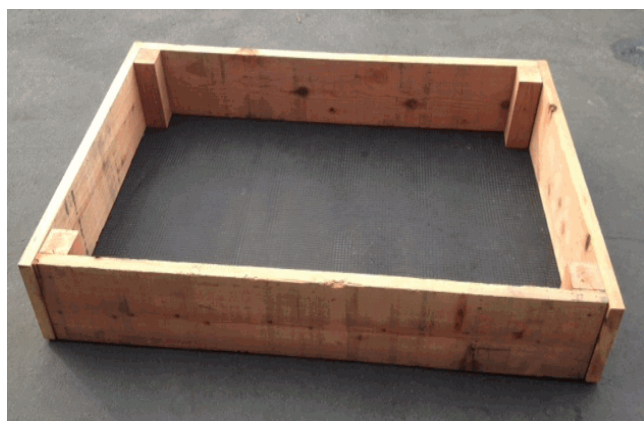

Step 3

Place the two end panels on top of the wire mesh (on the outside of the side panels so that the corner braces are on the inside of the garden box).

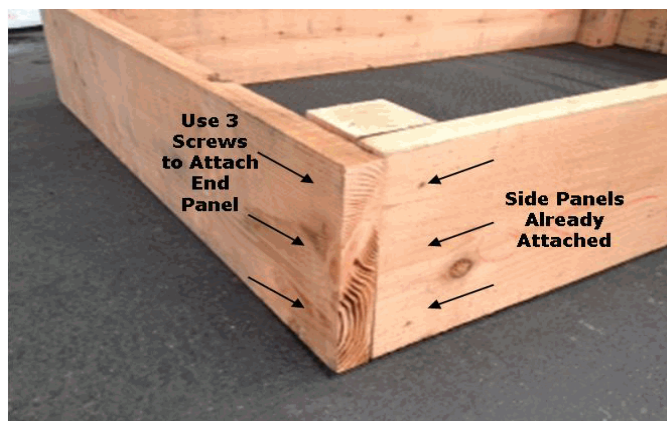

Step 4

Use three screws per corner to attach the end panels - the side panels (right side arrows) are already attached.